

# 17661

## STAINLESS STEEL LOW PROFILE L-FOOT FOR QB2 FOR ASPHALT, EPDM, & TPO ROOFS PATENT # 8448407



A DIVISION OF QUICKSCREWS INTERNATIONAL CORP

# TABLE OF CONTENTS

**3**

## SPEC SHEET

QTY & MEASUREMENT INFORMATION

---

**5**

## INSTALLATION INSTRUCTIONS

STEP-BY-STEP-INSTALLATION GUIDE


---

# SPEC SHEET

Part #	Box Quantity
17661	Low Profile L-Foot (25)



PN# 17661  
L-Foot for QB2

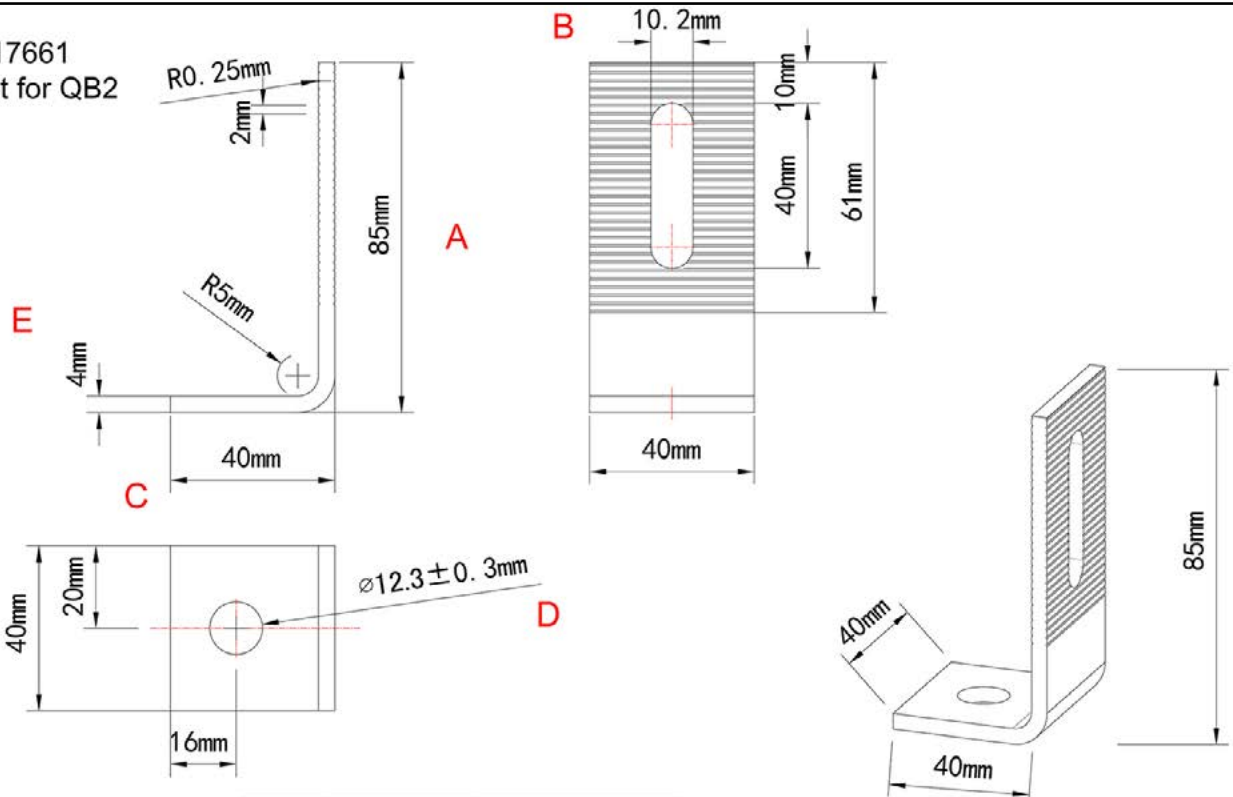



# INSTALL INSTRUCTIONS



1



2



3




4



5



6

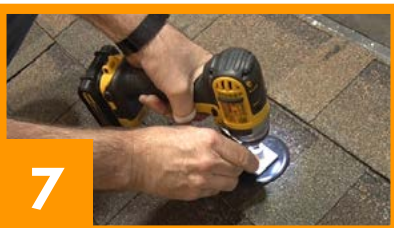

7

## QB2 (17662)

### RECOMMENDED MATERIALS

- Tools to locate and mark rafter
- Drill with a 15/64" drill bit
- MFG approved sealant (optional)
- 1/2" Nut Setter

### INSTALLATION INSTRUCTIONS

1. Locate and mark the rafter
2. Pre-drill the hole
3. Optional: Fill the predrilled hole with MFG approved sealant
4. Optional: Place a ring of sealant around the bottom of the Microflashing® washer
5. Place the Microflashing®
6. Insert the Bolt into the L-Foot
7. Drive the Bolt until the Microflashing® is compressed

