


17861

BLACK LOW PROFILE L-FOOT FOR QB2 FOR ASPHALT, EPDM, & TPO ROOFS PATENT # 8448407

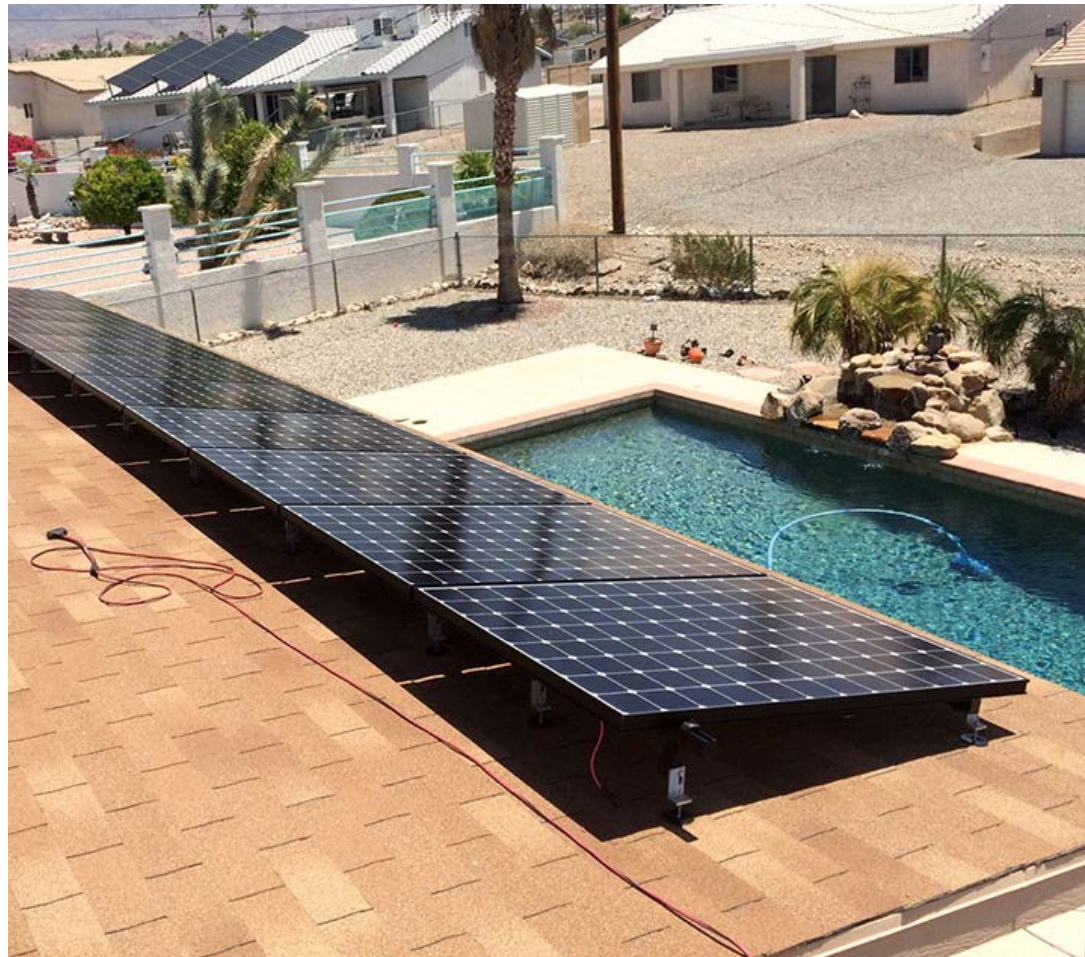

A DIVISION OF QUICKSCREWS INTERNATIONAL CORP

TABLE OF CONTENTS

3

SPEC SHEET

QTY & MEASUREMENT INFORMATION

5

INSTALLATION INSTRUCTIONS


STEP-BY-STEP-INSTALLATION GUIDE

SPEC SHEET

Part #	Box Quantity
17861	Low Profile Black L-Foot (25)



PN# 17861
Black L-Foot
for QB2

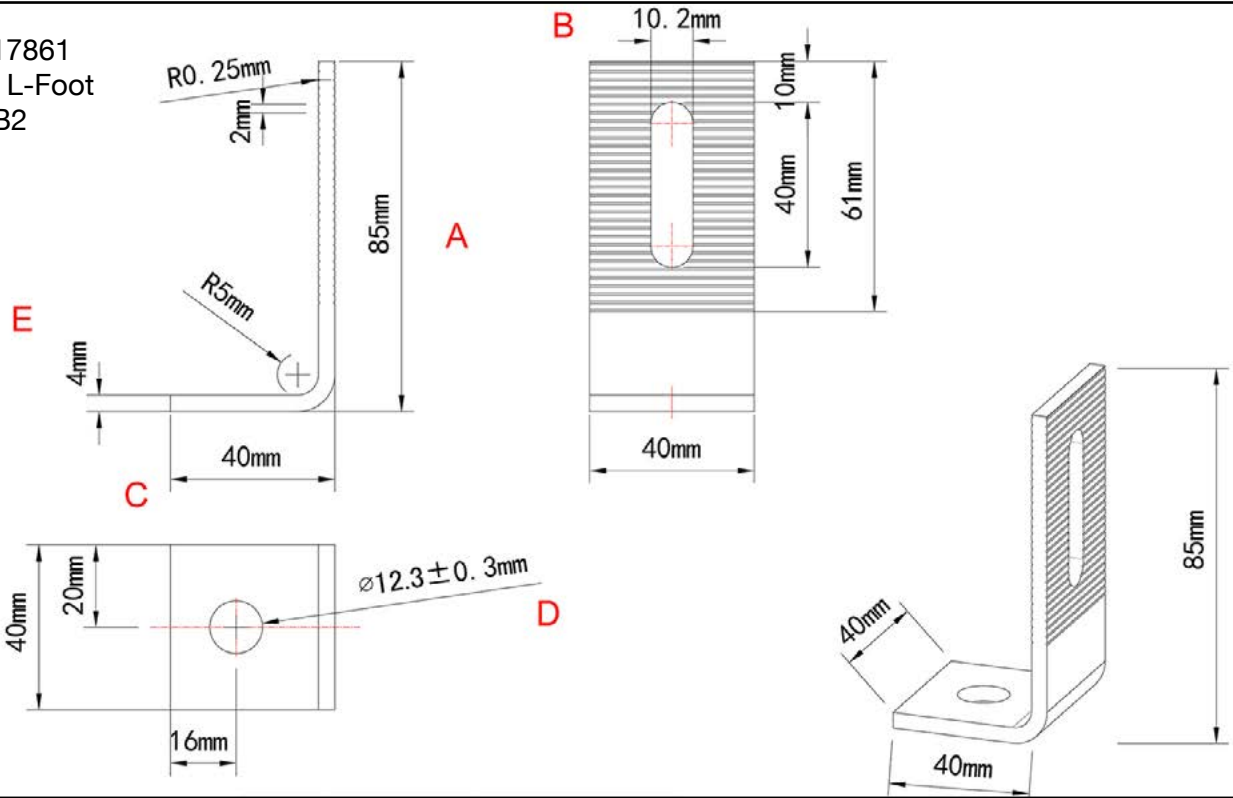

INSTALL INSTRUCTIONS



1



2



3




4



5



6

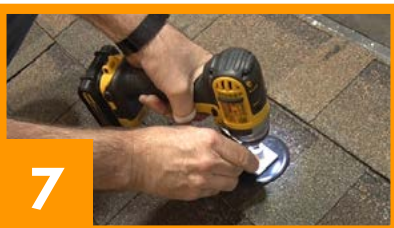

7

BLACK QB2 (17862)

RECOMMENDED MATERIALS

- Tools to locate and mark rafter
- Drill with a 15/64" drill bit
- MFG approved sealant (optional)
- 1/2" Nut Setter

INSTALLATION INSTRUCTIONS

1. Locate and mark the rafter
2. Predrill the hole
3. Optional: Fill the predrilled hole with MFG approved sealant
4. Optional: Place a ring of sealant around the bottom of the Microflashing® washer
5. Place the Microflashing®
6. Insert the Bolt into the L-Foot
7. Drive the Bolt until the Microflashing® is compressed

