

# 16261

16266

## QUICKBOLT WITH UMBRELLA WASHER FOR METAL ROOFS



A DIVISION OF QUICKSCREWS INTERNATIONAL CORP

# TABLE OF CONTENTS

3

## SPEC SHEET

QTY & MEASUREMENT INFORMATION

---

4


## INSTALLATION INSTRUCTIONS

STEP-BY-STEP-INSTALLATION GUIDE

---

# SPEC SHEET

| Part # | Box Quantity                    |
|--------|---------------------------------|
| 16261  | 8mm Umbrella Washer (1200/Pack) |
| 16266  | 8mm Umbrella Washer (100/Pack)  |

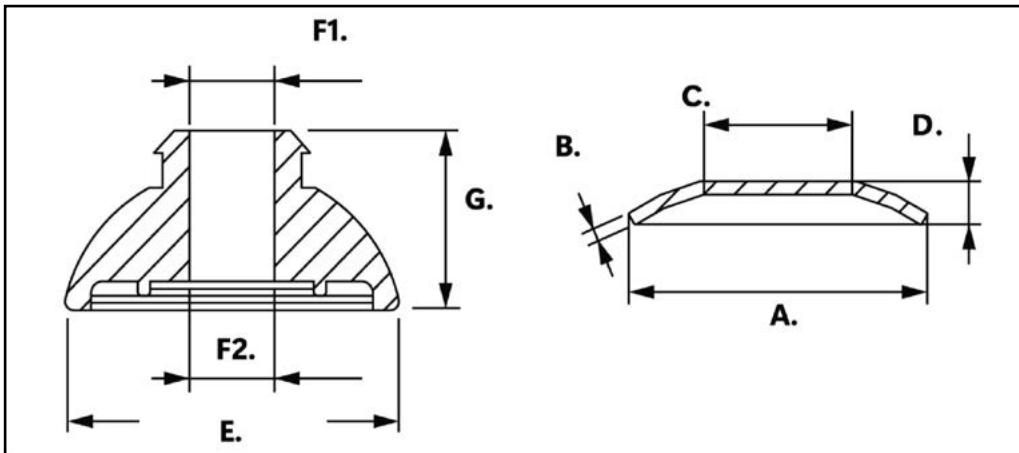

| NO. CODE | Description     | Size/Tolerance |        |
|----------|-----------------|----------------|--------|
| A        | Metal O. D.     | 21.50 ~ 22.50  | m/m    |
| B        | Metal THK.      | 0.95 ~ 1.05    | m/m    |
| C        | Metal I. D.     | 10.10 ~ 10.50  | m/m    |
| D        | Metal Total THK | 2.70 ~ 3.30    | m/m    |
| E        | Rubber O. D.    | 24.60 ~ 25.40  | m/m    |
| F1       | Rubber I. D.    | 7.50 ~ 8.10    | m/m    |
| F2       | Rubber I. D.    | 7.20 ~ 7.80    | m/m    |
| G        | Total THK       | 12.60 ~ 13.40  | m/m    |
| H        | Hardness        | 65° ~ 75°      | Degree |

# INSTALL INSTRUCTIONS



## RECOMMENDED MATERIALS

- Rafter locator
- Chalk or a crayon
- Drill with a 3/16" drill bit
- M6 deep socket hex driver



## INSTALLATION INSTRUCTIONS

1. Locate the rafter and predrill the hole
2. Place the screw with umbrella washer and drive until it compresses
3. Do not over-compress Umbrella Washer. If the EPDM is compressed too far it reduces the seal and could cause leak issues.

**\* Umbrella Washer only.** Screw not included.