


17894

BLACK SPLIT TOP LOW PROFILE L-FOOT FOR QB1 FOR ASPHALT, EPDM, & TPO ROOFS PATENT # 8448407

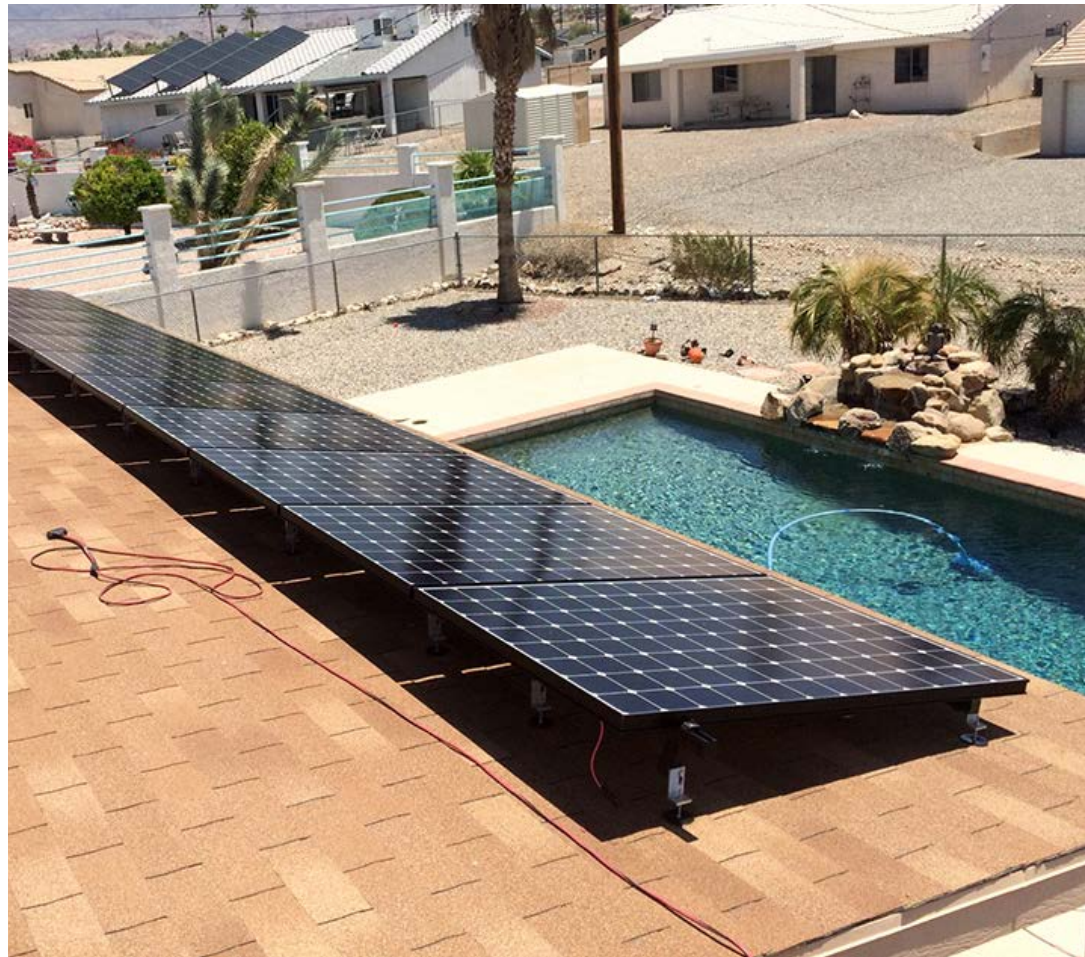

A DIVISION OF QUICKSCREWS INTERNATIONAL CORP

TABLE OF CONTENTS

3

SPEC SHEET

QTY & MEASUREMENT INFORMATION

4

INSTALLATION INSTRUCTIONS


STEP-BY-STEP-INSTALLATION GUIDE

SPEC SHEET

Part #	Box Quantity
17894	Low Profile Black Split Top L-Foot (25)



Part # 17894

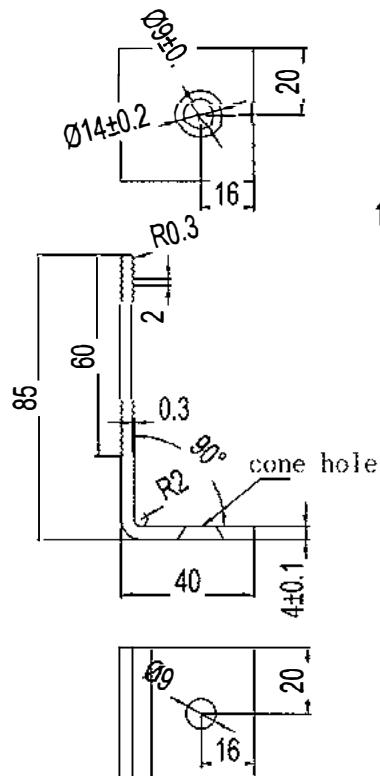

Bending tolerance	± 2 mm
Hole tolerance	± 0.5 mm
Hole distance tolerance	± 0.5 mm
Form tolerance	± 2 mm
Thickness tolerance	± 0.1 mm
Angle tolerance	$\pm 1^\circ$

2/14/21 QuickBOLT			
Design		Scale	Quantity
Drawing		Material	SUS304
Confirm		15894SS	Drawing No.
Verify		Split Top	Finish

INSTALL INSTRUCTIONS



RECOMMENDED MATERIALS

- Rafter locator
- Chalk or a crayon
- Drill with a 3/16" drill bit
- MFG approved sealant
- M6 deep socket hex driver
- 1/2" wrench

INSTALLATION INSTRUCTIONS

1. Locate the rafter and predrill the hole
2. Fill the predrilled hole with MFG approved sealant
3. Place a ring of sealant around the bottom of the Microflashing® washer
4. Place the Microflashing® and drive the bolt until it compresses
5. Insert the L-Foot
6. Insert the nut and tighten until secure

Use a minimum torque of **125 in-lbs** to properly compress Microflashing® when installing QB 1.

